## **Plant Sharing Solution**

Note: Users can download and install SAJ monitoring Apps with following accesses:

1) IOS Versions:Download eSolar O&M/eSolar Air via Apple Play Store2) Android Versions:Download eSolar O&M/eSolar Air via Google Play StoreOr, please scan the QR code below to install specific Apps:



(IOS/Android Version)

SAJ come up with new plant sharing function in eSolar Air and eSolar O&M for distributor, installer and end user.

Now you can easily and freely share your plant to anyone you want, and you can choose Access authority: View monitoring, Plant edition and Remote configuration.

## 1, For Installer and Distributor:

Firstly, Open eSolar O&M app and tap "Total plants", then tap "More" "Add visitor".



Secondly, tap the little "+" or "Add now" and type in the visitor's Username which you want to share. Then select the Authorization.



After that, You can see the target visitor has already in the visitors list. Swipe right if you don't want to share any more.





If someone shared the plant with you, you can check it in "Authorized Visit Plant".



## 2, For End User

Firstly, Open eSolar Air app and tap "Plant list", you can also check the visitor plant in your "plant list". then tap "List", "Add visitor" or "+".

4:01 <b>7</b>	4:01 <i>√</i>	Plant list	•11 4G 💌	4:01 <i>-</i> 7 <	Visitors list	,ıll 4G ⊯⊡
Sample no.3 Load monitoring 1485.00w	Sample no.3 Current Power 1485.00W	Today's Energy 0.82kWh	Acad monitoring			A
Current Power f Today's Energy 0.82kWh f Total Energy 5095.99kWh f	TestSampleNo.4 Current Power 63.00W	Today's Energy 0.01kWh Remove plant	Ead monitoring		No visitors now	
000	greg Current Power N/A	Today's Energy N/A			Add now	
Capacity 5.004Wp Commission Thes: 2020-09-15 Address: Turkey	Plant021 Current Power 88.00W	Today's Energy 13.15kWh			L	
Home Lat Inverter Quser	Madalsaben Dana	Remove plant wala Chart Inverter	Load monitoring		12	F

Secondly, type in the visitor's Username which you want to share. Then select the Authorization. After that tap "Add now".

4:01 7	•11 4G 📂	4:01 7	•11 4G 📴	4:01 ৵	111 4G 😼	
< Add visit	ors	< Add visitor	S	<	Add visitors	
Visitor	L'	Visitor		Visitor		
Please enter visitor's us	ername/e	somebody		somebody		
Visited power station		Visited power station		Visited power station		
Sample no.3		Sample no.3		Sample no.3		
Access authority	Access authority			Access authority		
Please select authorisat	ion 💌	Please select authorisation	• •	View Monito	oring 💌	
Reminder	8	Reminder	3	<u>Reminder</u>		
10 119	E	View Monitori Plant Editor	ıg		B	
Cancel	Add now	Remote configuration	(EndUser)	Cancel	Add now	

Now, you can see the target visitor has already in the visitors list. Swipe right if you don't want to share any more.



